


## Liner Clamp

Designed for use with a single 2x4 strongback for vertical form alignment, this liner clamp can be installed after erection of the forms and is not limited by form-tie spacing. Sturdy, galvanized construction reduces maintenance and replacement, and speedy installation reduces forming costs. Strongbacks are used to align and not to strengthen forms. They are normally used on one side only, spaced 6' horizontally. Liner clamps should attach the strongback to every other single waler.


No.	Wt (lbs)
CFA LC	1.1

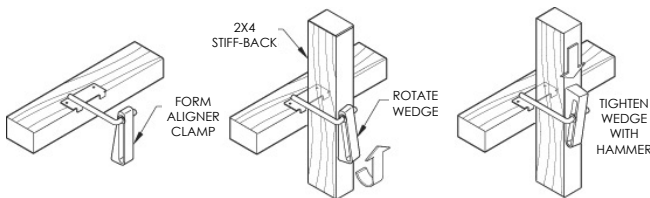

## Steel Wedge

The steel tie holder is fabricated from high carbon steel and heat treated for added strength. Easily installed and removed; will not turn or fall off. 100 pieces/carton.


No.	Wt (lbs)
CFA SW5	0.47

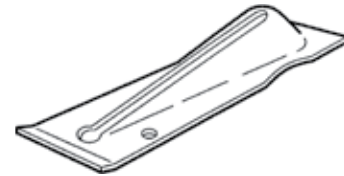

## Panel Clip

A thin, strong clip used primarily for adding extra height to form panels. A common use of the Panel Clip is as an aid to setting standard narrow filler panels horizontally on the top of a wall of form panels. Standard wall ties can be used to tie the wall at the joint between the fillers and the normal wall panels. 50 pieces per carton.

No.	Size	Wt (lbs)
CT PC34	3/4"	0.40
CT PC118	1-1/8"	0.40

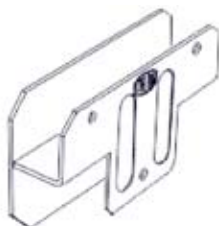

## Waler Bracket

Unsafe toenail connections can be eliminated and waler lumber saved by using this bracket. Fasten to studs with double head nails, insert walers and secure with Steel Wedge. Normal spacing 4' on center. Available in one size for 2x4's.

No.	Wt (lbs)
CFA WB24	0.87

